T B SERIES

indelB

trouble shooting

TB SERIES

- 3 ERROR E1
- 4 ERROR E2
- 5 ERROR E3
- 6 ERROR E4
- 7 ERROR E5
- 8 ERROR E6
- 9 HOW TO REPLACE THE TEMPERATURE PROBE
- 10 HOW TO REPLACE THE FAN
- 11 HOW TO REPLACE THE ECU
- 12 HOW TO REPLACE THE DISPLAY
- 13 HOW TO REPLACE THE DRAWER
- 14 HOW TO REPLACE THE DOOR
- 15 HOW TO REPLACE THE DRAWER RAIL
- 16 17 HOW TO CHANGE THE REFRIGERANT UNIT POSITION



TB_16DR_30DR_(DC)_TS_22-03-2019



• ERROR E1: Battery protection cut-out

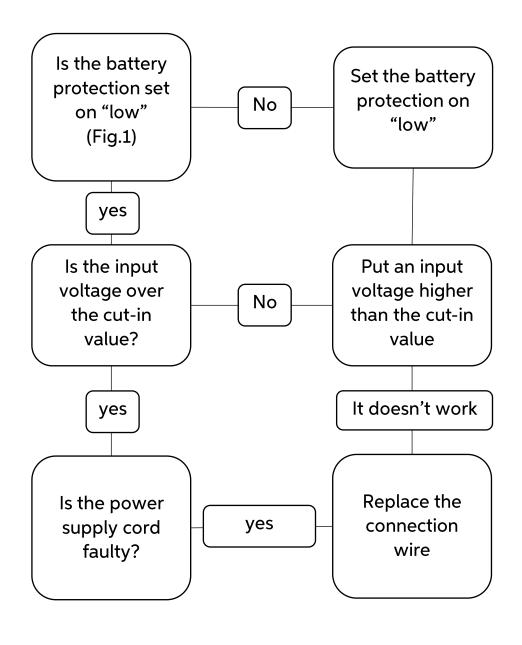




Fig. 1



• ERROR E2: Fan over-current cut-out

This error is caused by an over-current that arrived at the fan. In this case you must replace the fan (see "How to replace the fan").



• ERROR E3: Motor start error

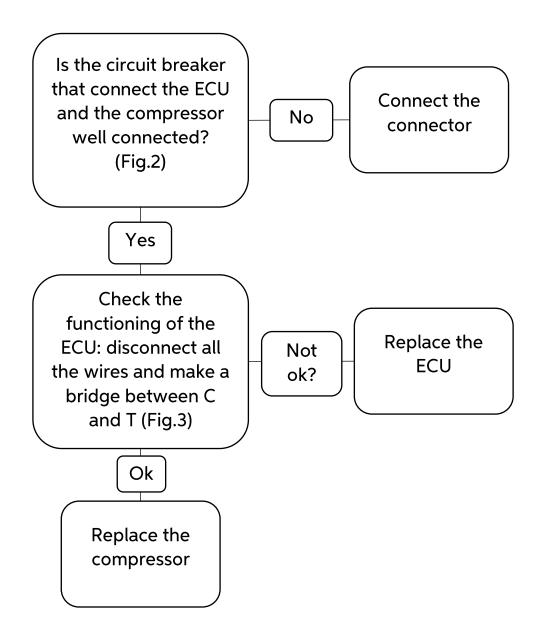




Fig. 2



Fig. 3



• ERROR E4: Minimum motor speed error


Check the input voltage. Voltage drops can cause this error

Ok

Remove the ECU and replace it




• ERROR E5: Thermal cut-out of electronic unit

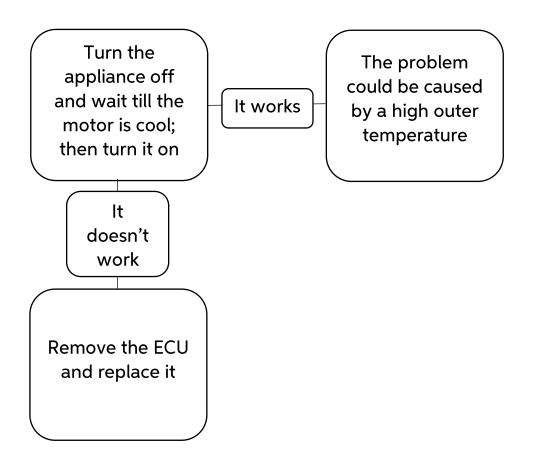



• ERROR E6: Faulty temperature probe

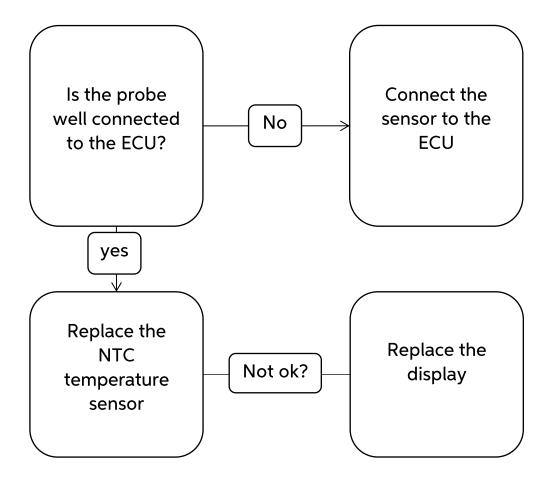



HOW TO REPLACE THE TEMPERATURE PROBE



1. Switch the position of the hooks in both sides of the drawer (see the following picture)



2. While you keep the two hooks in switched position, pull the drawer to remove it



3. Push with a finger sideways to unscrew the probe's protection



4. Disconnect the wire and reverse the procedure to replace the probe



HOW TO REPLACE THE FAN



1. Unscrew the carter (8 bolts)



2. Unscrew the 2 bolts fixing the fan and reverse the procedure replacing the fan with a new one



HOW TO REPLACE THE ECU



1. Unscrew the carter (8 bolts)



2. Unscrew the first bolt




3. Unscrew the last bolt, disconnect all the wires from the ECU and remove it. Reverse the procedure to replace the ECU



HOW TO REPLACE THE DISPLAY



 Insert a thin object on the bottom of a corner and use it as a leverage

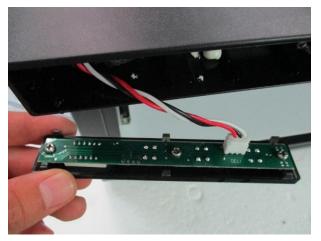

2. Disconnect the wire and replace the display



HOW TO REPLACE THE DRAWER



1. Switch the position of the hooks in both sides of the drawer (see the following picture)



2. While you keep the two hooks in switched position, pull the drawer to remove it



HOW TO REPLACE THE DOOR



1. Switch the position of the hooks in both sides of the drawer (see the following picture)



2. While you keep the two hooks in switched position, pull the drawer to remove it



3. Unscrew the bolts fixing the door (6 bolts)



4. Pull the drawer keeping the door with the other hand



HOW TO REPLACE THE DRAWER RAIL



1. Switch the position of the hooks in both sides of the drawer (see the following picture)



2. While you keep the two hooks in switched position, pull the drawer to remove it



3. Unscrew the bolt in figure



4. Unscrew the 2 highlighted bolts to remove the trail and reverse the procedure to replace it



HOW TO CHANGE THE REFRIGERANT UNIT POSITION



1. Unscrew the carter (8 bolts)



2. Unscrew the 2 bolts fixing the fan and reverse the procedure replacing the fan with a new one





3. Unscrew the basement of the refrigerating unit (4 screws)



4. Cut the 3 cable-ties fixing wires and pipe



Move the refrigerating unit to one of the three possible positions:



1) RIGHT-SIDE: Screw the 4 screws and then reinstall the fan



2) UPPER-SIDE: Screw the 4 screws and then reinstall the fan





3) LEFT-SIDE: Pierce the label in corrispondence of the screw hole, then fix the refrigerating unit with the 4 screws. Reinstall the fan.