



Renault T Cab Locker - Fitting Instructions



WARNING

**Do not exceed maximum load
15KG per locker compartment
Max Load - 55KG**

**ENSURE LOCKER CONTENTS ARE SECURE
AND DOORS ARE FULLY CLOSED
BEFORE MOVING VEHICLE OR TILTING CAB**

IMPORTANT SAFETY INFORMATION

When installing a CabStore locker the supplied fitting instructions must be followed. If you are missing the fitting instructions in your delivery please contact our team on sales@kudauk.ltd.uk prior to fitting.

We suggest that Loctite (or it's equivalent) is used on all fixings where required and that only the fixings provided as part of the fitting kit are used.

Maximum loads must be adhered to and you should not overload the compartments individually or as a whole.

Do not use locker fixing points to secure any other equipment other than the locker.

When installing a TruckChef microwave to a CabStore locker, ensure the correct mounting cradle is used and secured through the locker floor with the supplied fitting bolts.

Any other equipment installed or fitted permanently or temporarily to this locker system is done so entirely at the risk of the installer / operator.

CabStore locker systems have undergone rigorous impact testing at full load to ensure the integrity and safety of the product.



Remove plastic trim from rear wall.

Remove 4 x plastic bungs and drill out holes to 11mm.

Place M8 Nut Inserts into 4 drilled out holes.





Using the M8 x 25mm Domehead Screws, and M8 x 25mm Washers, Bolt the four brackets onto the back wall, into the Nut Inserts fitted previously.

Place a Black Rubber Square behind each bracket to space from wall. Tighten to secure.

Put original brackets back and secure (as shown below).





Replace original plastic trim to rear wall (as shown above)

Release handle in roof and place bracket behind and secure by tightening handle.

(Note, brackets are handed)





Inside View

Fix locker floor into place, using the painted M6 x 30mm Flat Head Screws, M6 x 20 Washers & M6 Nyloc Nuts.

Tighten all 4 fixings.



Bottom View



Lift Locker Facia into place.

Secure to top brackets (behind handle) using M6 x 35 Domehead Screws, M6 x 20 Washers & M6 Spring Washers.

Tighten all fixings.



Fix fascia to locker floor, as shown above.

Secure using M6 x 25mm Screws, M6 x 12mm Washers & M6 Nyloc Nuts.

Tighten all fixings.



Place the 4 dividers into position inside the locker.

Using 4 Black Self Tapping Screws per divider, fix into place with small L Brackets, as shown below.

Use M6 x 12mm Washers on floor fixings only, (As shown below).

Fixing dividers to rear of front facia.






Fit 3 door assembly's as shown above.

Fixing to front facia using M6 x 35 Screws & M6 Spring Washers.

Tighten all fixings.



Fix side door runners as shown, using 2 x Black Self Tapping Screws into pre drilled holes in front facia (arrowed).

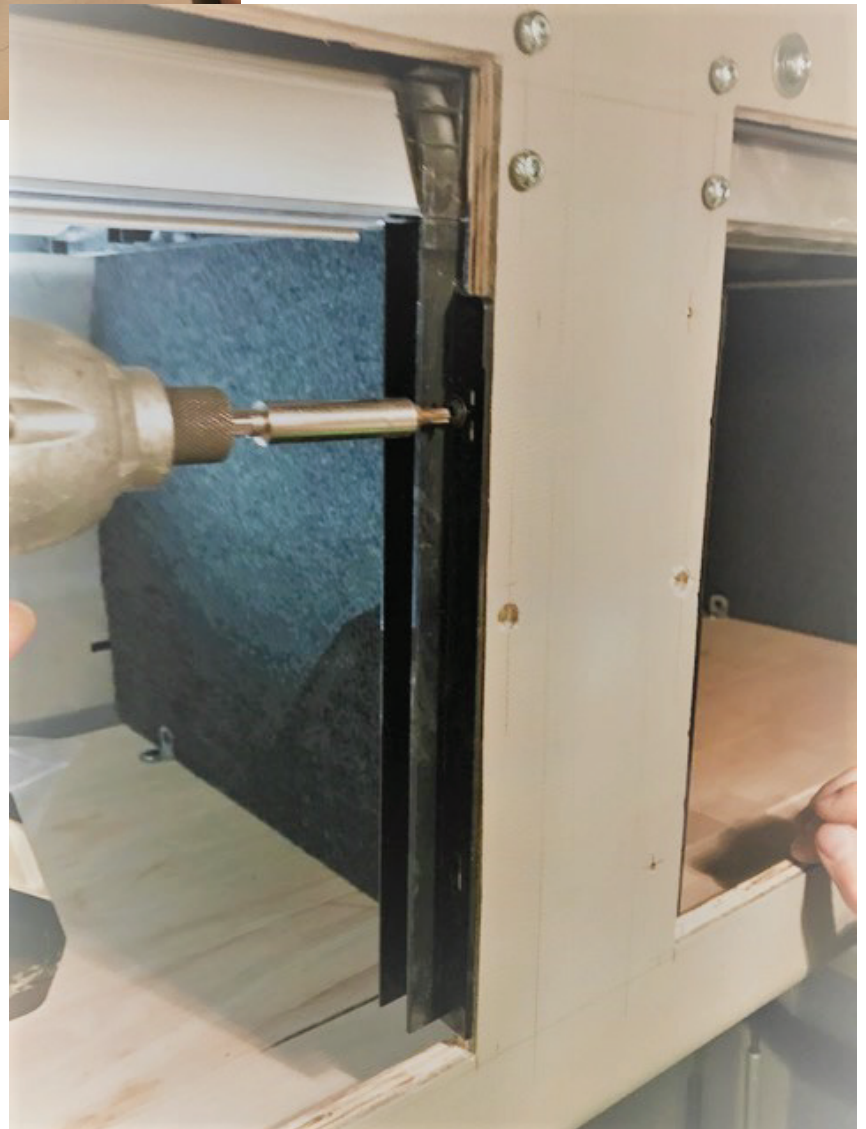



Fit 3 x door surrounds onto front, locating bonded in screws through pre drilled holes in fascia.

SECURE using M6 Nyloc Nuts & M6 x 12mm Washers (as shown right)

Tighten fixings, ensuring not to over tighten and crack surround.



Fitting of Microwave into locker

Fitting DURING locker fitment:

Fit microwave after fitting dividers (Page 7).

Secure to locker floor using brackets supplied with microwave, using Black Self Tapping Screws & M6 x 25mm Washers.



Fitting AFTER locker fitment:

Remove centre door surround and side runners (Page s 9-10).

Remove door by sliding down and out, leaving metal door frame in place.

Fit microwave to locker floor

Secure to locker floor using brackets supplied with microwave, using Black Self Tapping Screws & M6 x 25mm Washers.

Replace door, runners and surround.

RENAULT T CAB REAR LOCKER FIXINGS

4 x M8 Nut Inserts

4 x M8 x 25mm Domehead Screws

4 x M8 x 25mm Washers

4 x Black Rubber Squares

4 x M6 x 30mm Flathead Screws—Painted

6 x M6 x 20mm Washers

16 x M6 Nyloc Nuts

6 x M6 x 25mm Screws

26 x M6 x 12mm Washers

14 x M6 x 35mm Domehead Screws

14 x M6 Spring Washers

28 x 1/2 Inch Self Tapping Screws—Black

ADDITIONAL PARTS FOR FITTING MICROWAVE

Volvo V3 Legs

4 x M6 x 20mm Washers

4 x 1/2 Inch Self Tapping Screws—Black