


# 4030 Renault Premium Distribution/Kerax Dirt deflectors fitting instructions

## Part list:

1. Dirt deflector	1 pair	5. Screw 5x 20mm	8 pcs
2. Middle support	1 pair	6. Nylok nut M6	2 pcs
3. Gasket tape	2 m	8. Washer M6,4x15	12 pcs
4. Screw 6x60mm	2 pcs	9. Rubber wellnut M5	8 pcs

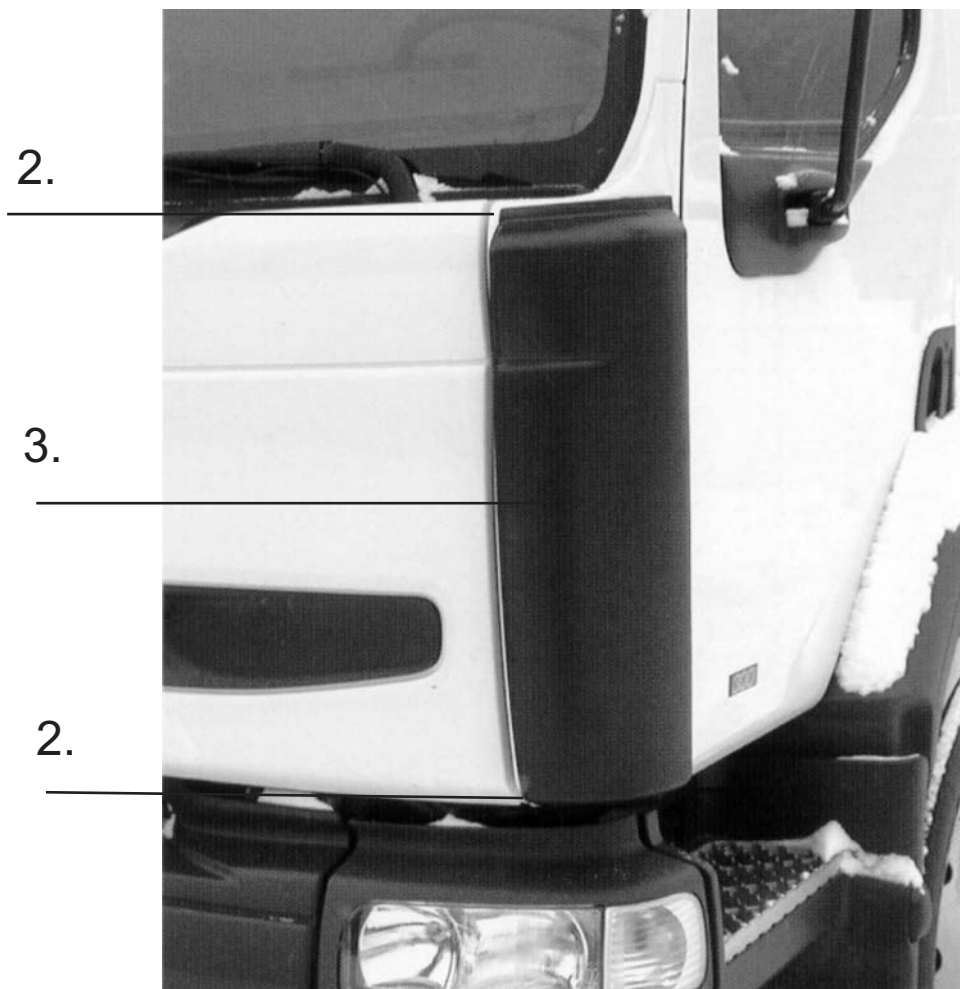

1. Place the deflector on the cornerpart and mark fitting points.
2. Drill 9,5mm holes on the cornerpart and place rubber wellnuts in to the holes.
3. Drill 6mm hole for the middle support.
4. Fit the gasket tape on the dirt deflector and the middle support.
5. Fit the deflector from middle by using the middle support, 6x60mm screw, 6mm washers and 6mm nylok nut.
6. Fit the top- and bottmpart of the deflector by using 5x20 screws and washers.