


Part list

5156-2/5/7 Sun visor	1pc	1040 M8 X 40 DIN 931	2pcs
4154 Lamp holder	2/5/7pcs	1010 M6 X 20 TORX	4/10/14pcs
4155 Hook sleeve	3pcs	1035 Washer 6 X 18	8/20/28pcs
1045 M8 X 30 DIN 933	3pcs	3876 Mirror adapter	1pc
1013 Washer 8 X 17 DIN 125	7pcs		
1004 M8 DIN 985 Nylok	2pcs		

1. Scania light and mirror assembly

1.1 First mount the lamp holder #4154 to Scania light 2252783 (not included)

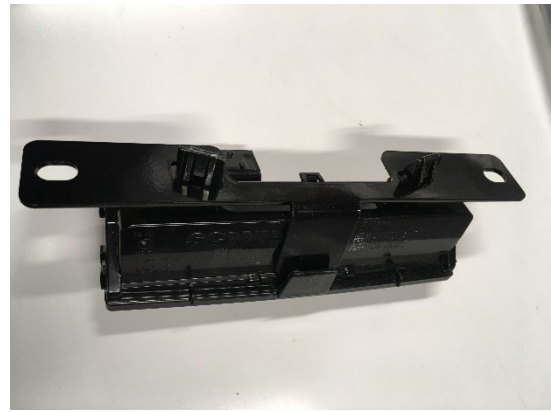

1.2 Mount the lamp into visor. With washers #1035 can be adjusted how deep the lamp goes to the visor.



1.3 Mount the mirror adapter #3876 to the mirror with screws #1045, washers #1013 and nylook #1004.





2. Sun visor assembly

2.1 First mount the screws #1045 2pcs and #1040 1pc with washers #1013 to the vehicle. Leave the screws as much open as possible.



2.2 Lift the visor to vehicle and mount the mirror adapter inside the visor.



2.3 Mount the hook sleeve #4155 between the washer and sun visor and tighten the screws. With mirror adapter it is not necessary to use sleeve #4155.

