

EURO 6
TRIP HAZARD CATWALK PANEL
FITTING INSTRUCTIONS




TOTAL FITTING TIME = 30 MINUTES

KUDA UK LTD


Tel: 01449 744174

Email: sales@kudauk.ltd.uk


Web: www.kudauk.ltd.uk

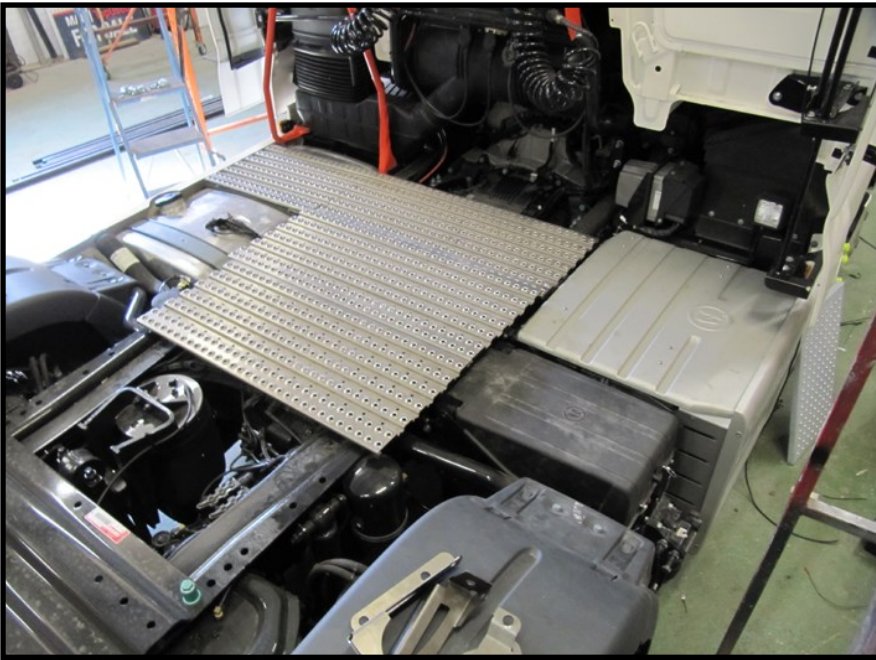

Original catwalk setup, as supplied from factory.

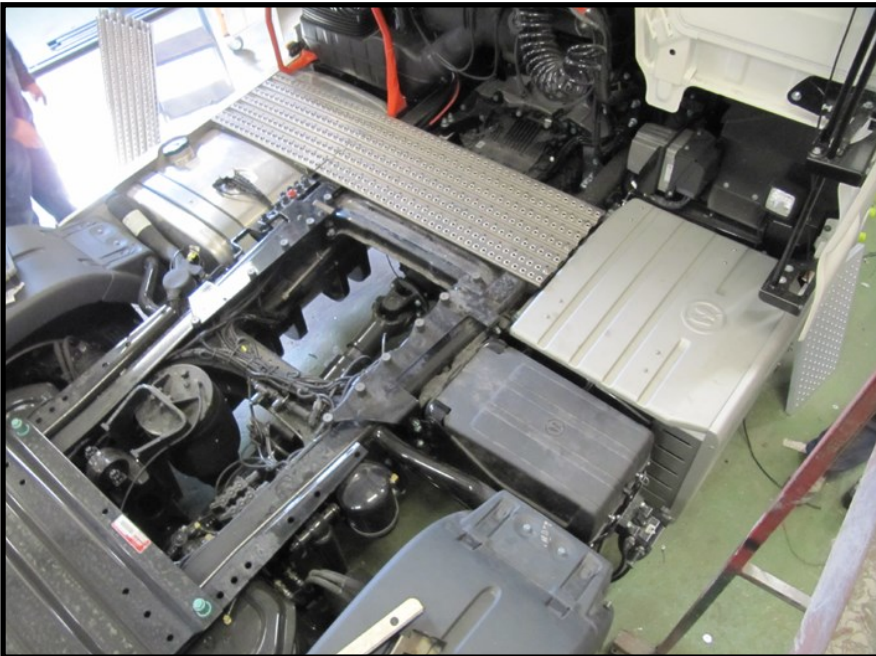


Remove 2 x rear catwalk panels.

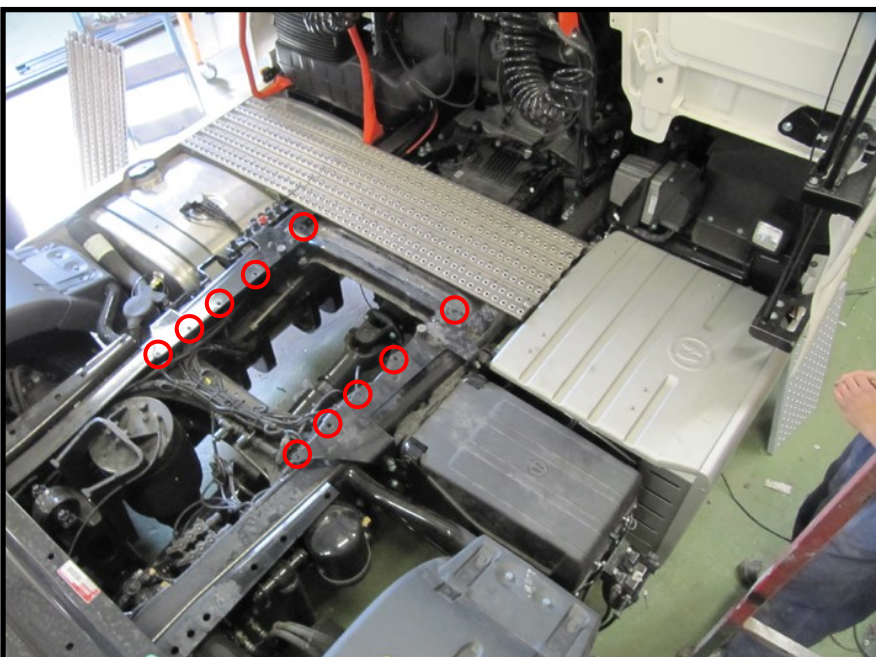


Remove 10 x mounting rubber blocks, leaving second from front 2 in place (as shown left).

(Dispose of front 2, as these will not be needed)

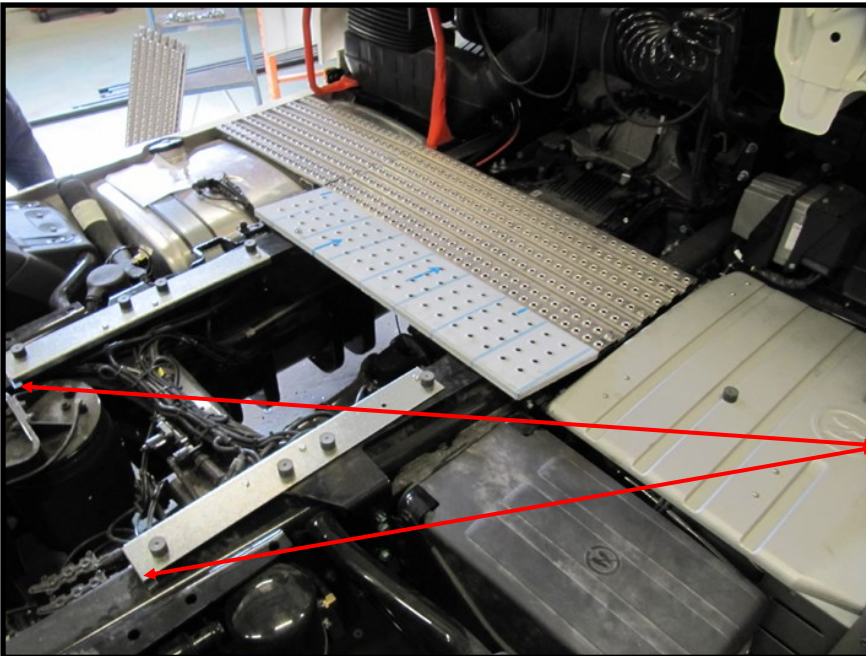

Locate new catwalk panel, sliding front edge under original catwalk panel, and aligning locating holes in panel with rubber mounting blocks. Secure with M8x12mm dome head screws & washers provided.

Stick strip of adhesive foam on bottom return of catwalk fitting plates (as shown left).

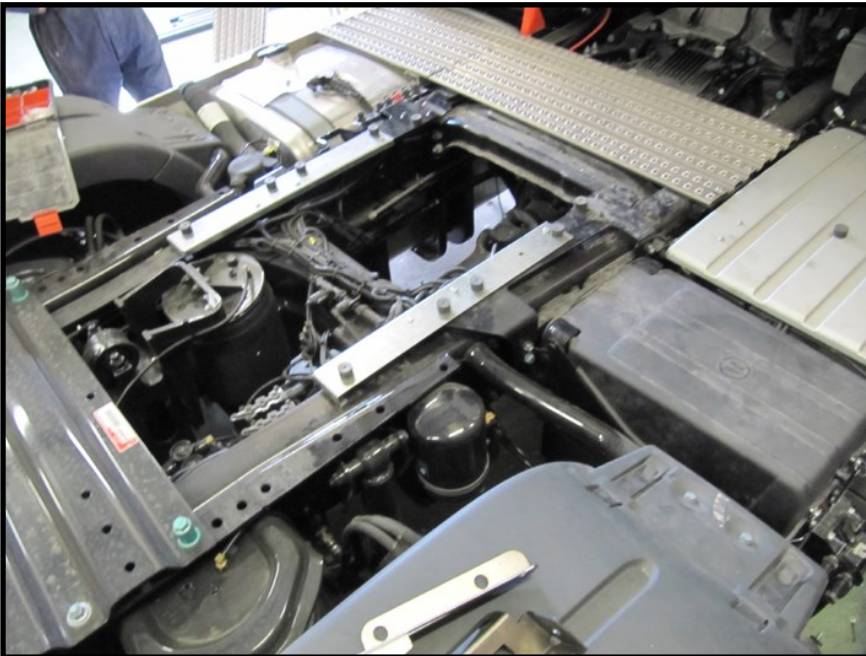


Fit 8 x rubber mounting blocks onto studs on fitting plates.

Locate new catwalk fitting plates onto chassis, aligning 8 x holes with original rubber mounting block positions.


Secure plates through 6 existing chassis holes (3 each side) with M8x25 screws, washers and nyloc nuts supplied.



Note: Before tightening these screws/nuts, align original catwalk panels with rubber mounting blocks and original catwalk screw holes.

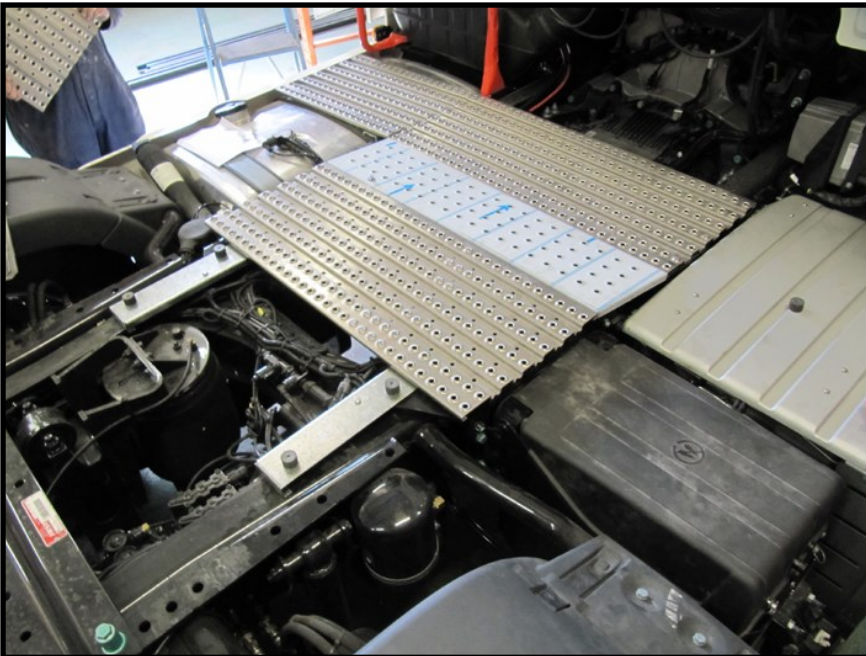

Replace original catwalk panel, securing onto rubber mounting blocks, using original screws.

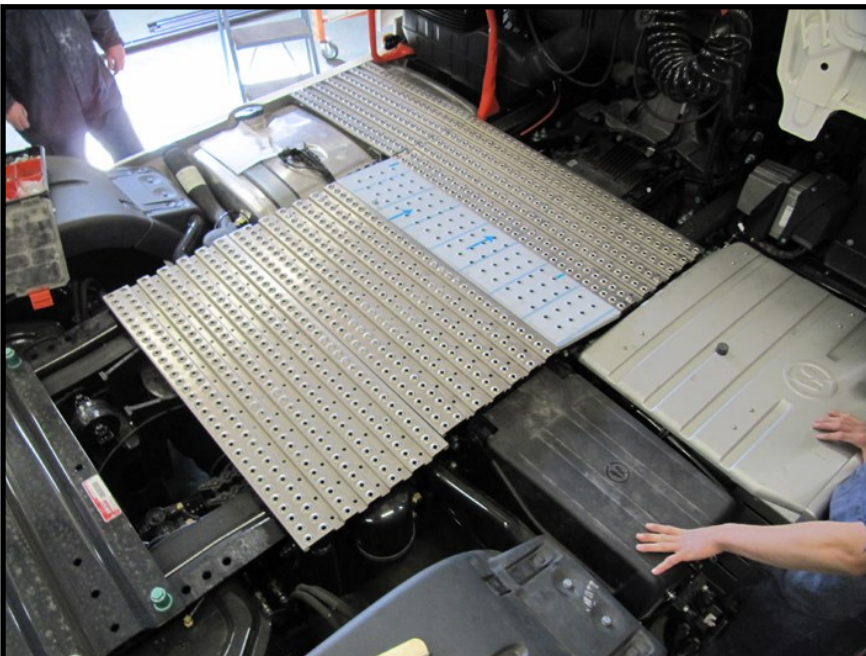

Replace original catwalk panel, securing onto rubber mounting blocks, using original screws.

NOTE: Catwalk is longer on offside, (as shown left).

Parts List:

- 1 x CATWALK PANEL
- 1 x NEARSIDE CATWALK FITTING PLATE
- 1 x OFFSIDE CATWALK FITTING PLATE
- 2 x M8 x 12mm BUTTON HEAD SCREWS
- 6 x M8 x 25mm SCREWS
- 6 x M8 NYLOC NUTS
- 12 x M8 x 20 WASHERS
- 2 x 90mm ADHESIVE FOAM PADS

