

IMPORTANT NOTE

This kit is Designed to suit vehicles with the 0P2HH (Storage space, below the bunk, with bulkhead) option code from the factory. If you do not have this option (pictured below) then this kit will not fit.



Step 1.

Remove the centre, front bulkhead fascia panel. Held on by 10 screws. Also remove the nearside and offside front fascia panels carefully with a trim removal tool.

Step 2.

Remove the top and bottom centre cross braces from the front of the bunk assembly.

Step 3.

Ensure the compressor unit on the supplied fridge is repositioned to the right hand side of the unit. There are instructions in the fridge on how to do this.


Step 4.

Position the fridge under the bunk, so the pull out drawer is central to the cab. Install Anti-rattle foam to the bottom cross bars under the bunk.

Step 5.

Mark and trim the front fascia panel with an aperture as shown below.

IMPORTANT NOTE
 This conversion cuts an OEM panel which, once done can not be rectified without the purchase of a new panel. We urge all customers to measure twice before cutting.

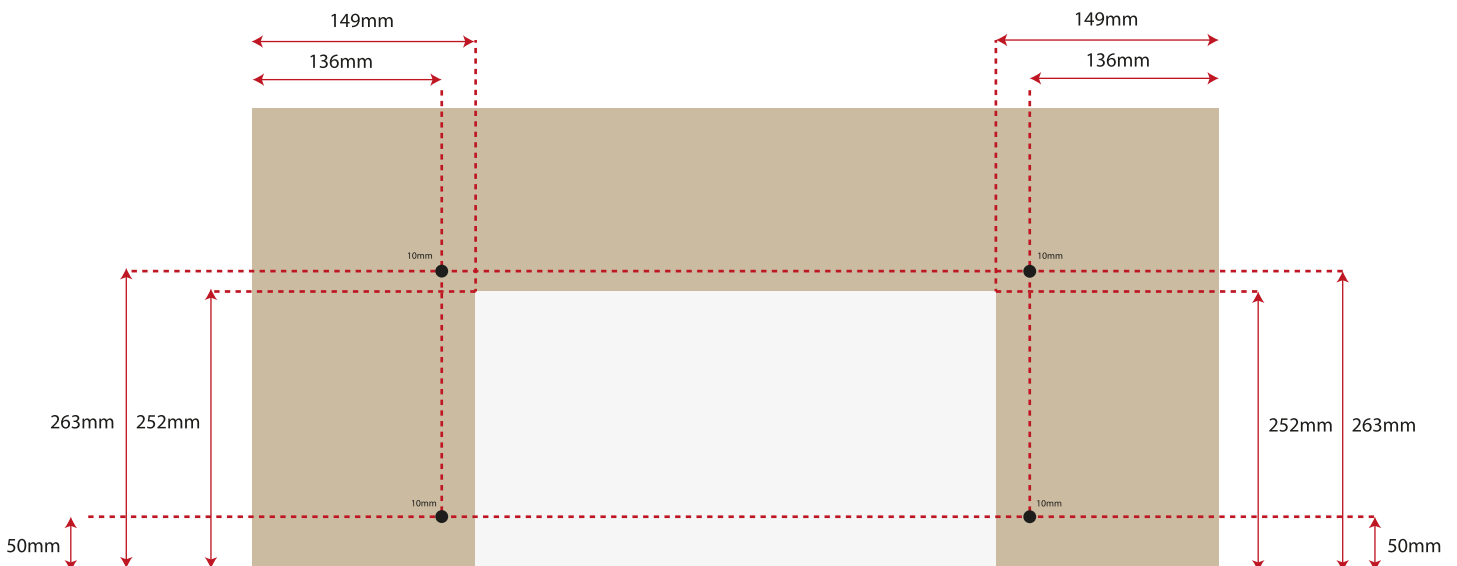



Step 6.

Drill the front fascia panel so the studs in the aperture surround can be passed through it and secured with nylocks.

Step 7.

Install Anti-rattle foam on top and rear brace bars. Re-fit the top brace bar to the bunk frame work and position the fascia panel, secure with original screws.

Step 8.

Install the rear brace bar by aligning it with the threaded inserts in the top of the fridge as shown. Mark and drill through the bunk frame, nut and bolt to secure.

Step 9.

Run a twin core power cable from the front fuse board, pinning with OEM pins to the MAN Bodybuilder specified fridge terminal to the area under the bunk. Connect this cable to the fly lead at the rear of the fridge with a plug. **DO NOT FUSE UNTIL INSTALL COMPLETE.**

Step 10.

Re-Fit the nearside and offside fascia panels. "Tie" into the centre fascia panel with the small beige brackets provided. Screw to secure.



Fitting List

- 4 x M6 x 20 Bolts
- 6 x M6 Nylocks
- 10 x M6 x 20mm Washers
- 6 x M8 x 12mm Screws
- 6 x 3mm x 19mm Foam, 600mm Total
- 1 x Rear Brace Bar
- 2 x Beige front brace brackets
- 1 x Front aperture fascia panel
- 1 x 30L pull out drawer fridge

www.kudauk.ltd.uk 01449 744174

Kuda UK LTD. Crowcroft Road, Nedging Tye, Ipswich, Suffolk, IP7 7HA. United Kingdom.