




VEPRO OY 5106 Nissan Cabstar 2006- / Renault Maxity/ 5107 Toyota Dyna wide cabin 2006- Mounting instructions

1. Acrylic part	1 pc	2. Center bracket	2 pcs
3. Cover hat	6 pcs	4. Cover collar	6 pcs
5. Screw M6x30mm	4 pcs	6. Rubber washer 6mm	6 pcs
7. Rubber washer 3mm	4 pcs	8. Screw M6x40mm	2 pcs
9. Washer M6x22mm	4 pcs	10. Nylok M6	4 pcs
11. Hex. screw M8x20mm	8 pcs	12. Washer M8x17mm	8 pcs
13. Rubber gasket	8 pcs	14. Rivet nut M8	8 pcs
15. Rubber wellnut M6	2 pcs		

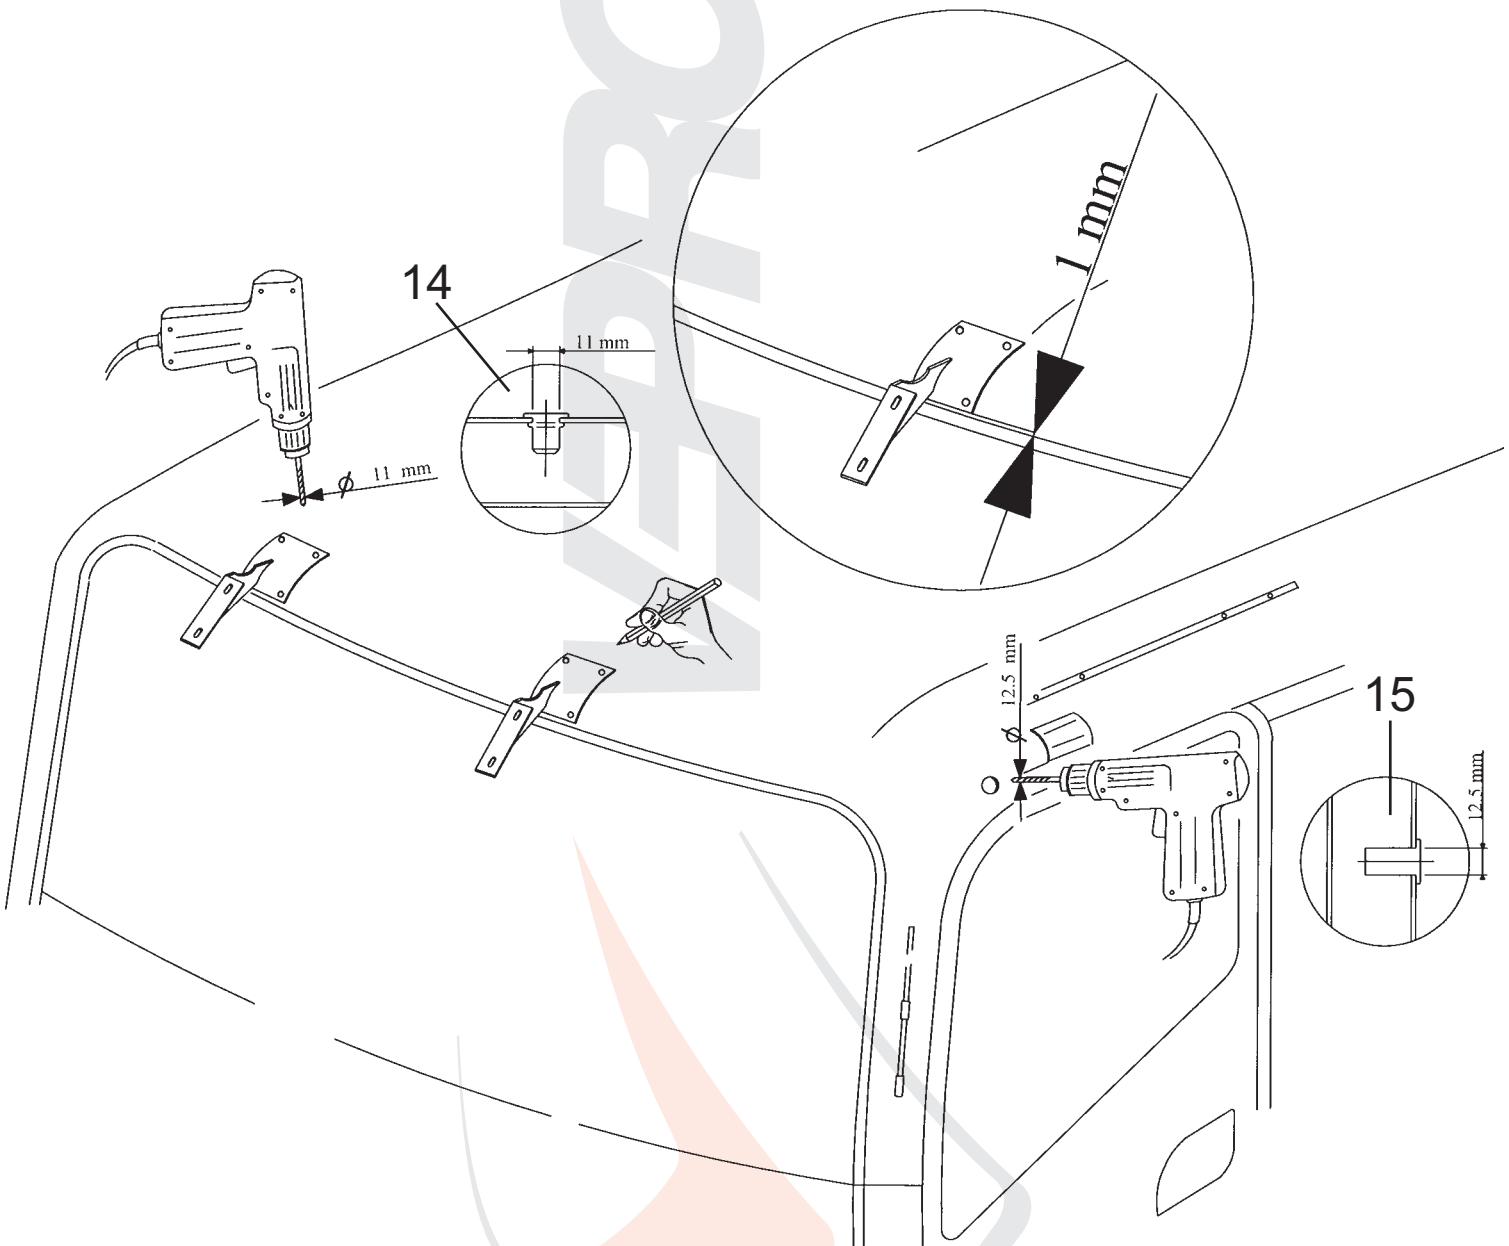




VEPRO OY

**5106 Nissan Cabstar 2006- / Renault Maxity/
5107 Toyota Dyna wide cabin 2006-
Mounting instructions**

apply sikaflex 252 between the
roof and the center bracket

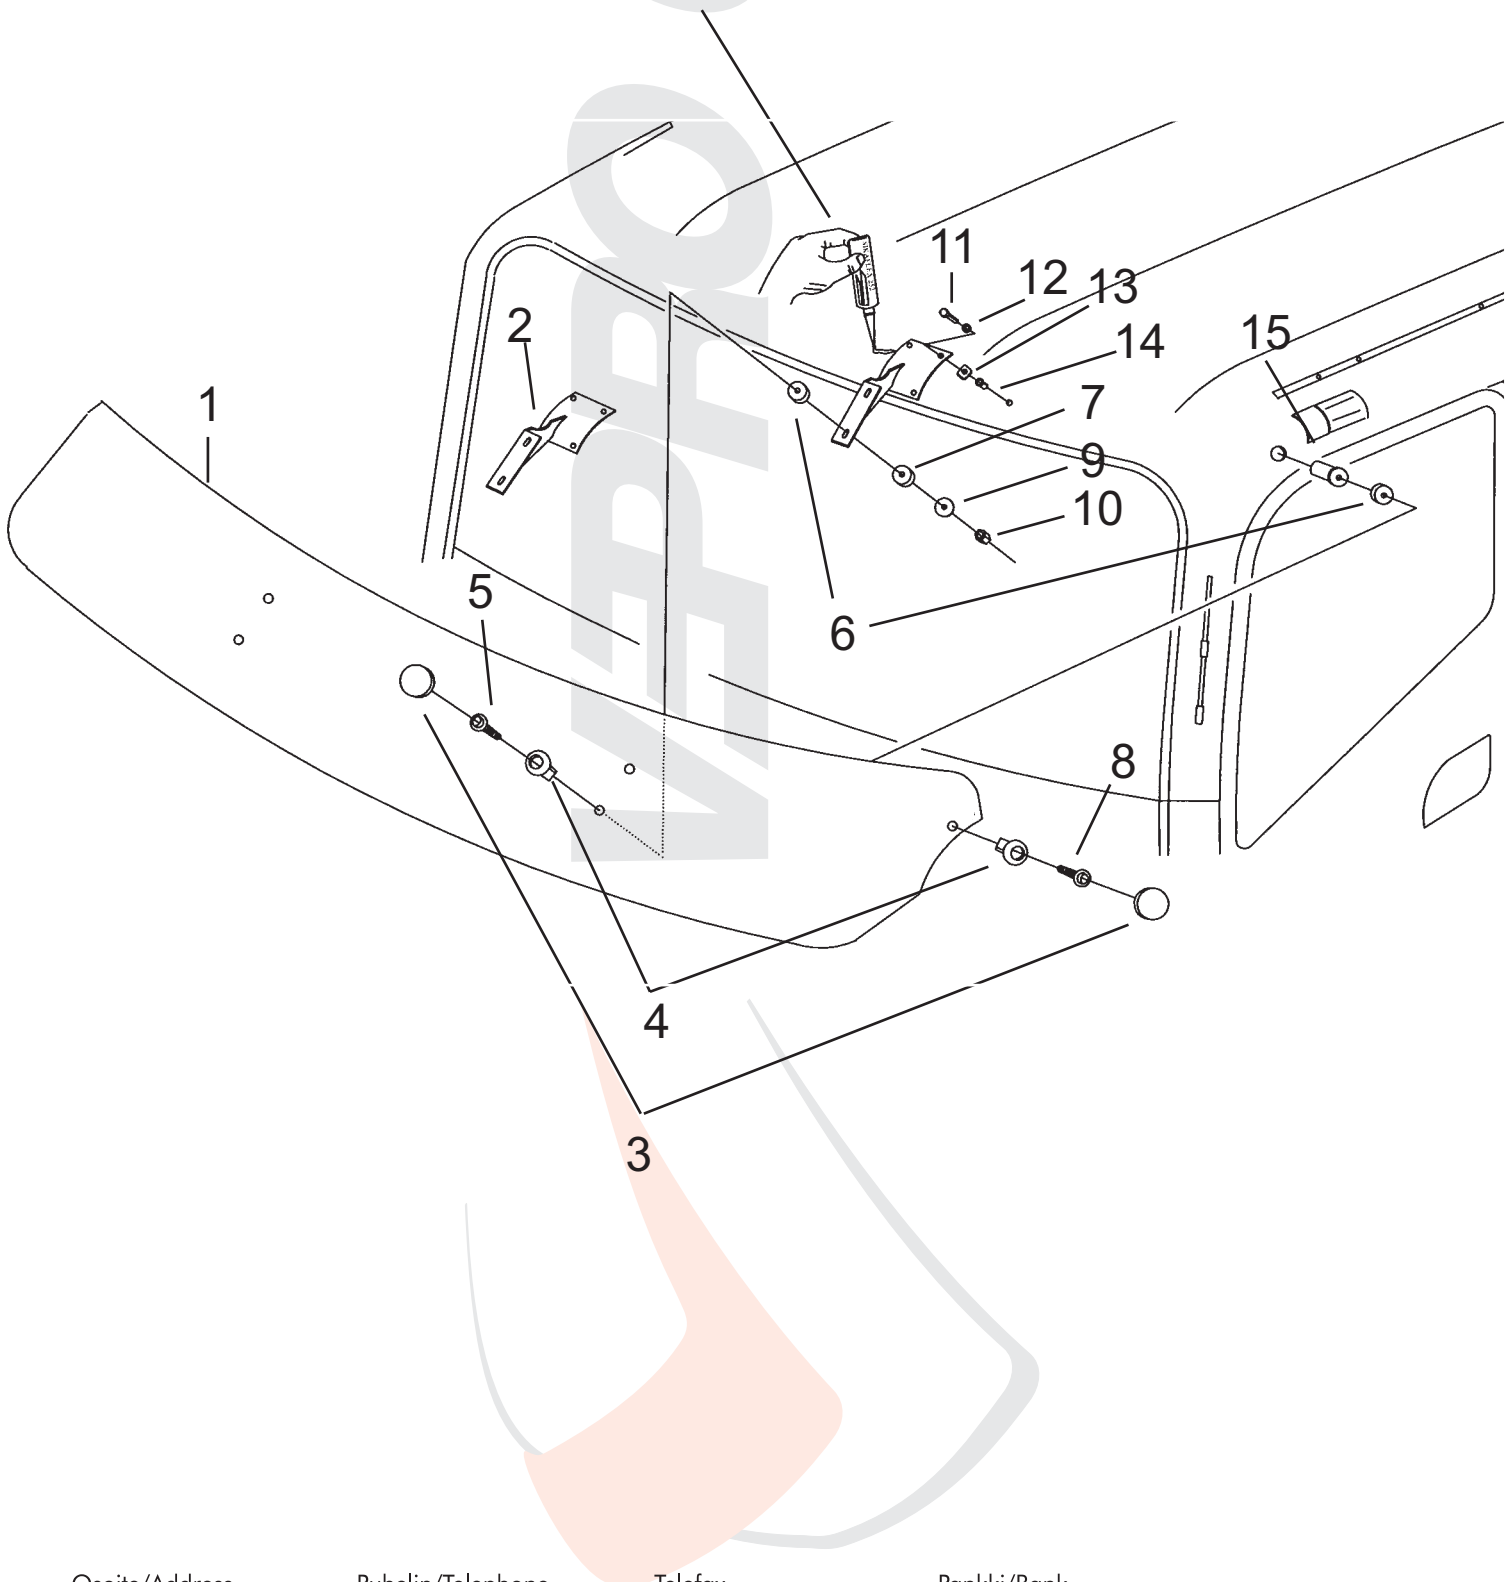

Osoite/Address
Tehtaankatu 21,
11710 RIIHIMÄKI
FINLAND

Puhelin/Telephone
+ 358 19 724 000

Telefax
+ 358 19 720 765

Pankki/Bank
OKO 539602-254945
Sampo 800016-70104554
FI09001798