


1. Take your vehicle to a dry place, clean the mounting area and mask tape front corners.

2. Mount the 6*14mm set screws on the holes as shown on the picture (hex head inside the deflector) and put some ink or paint marker on the head of the set screw in order to mark the mounting hole positions.



3. Place the deflector on the corner as shown on the picture and press the part against the corner of the vehicle. The correct position of the part is shown on the picture (20-25mm from the vertical edge on the side and on the middle of the styling groove).

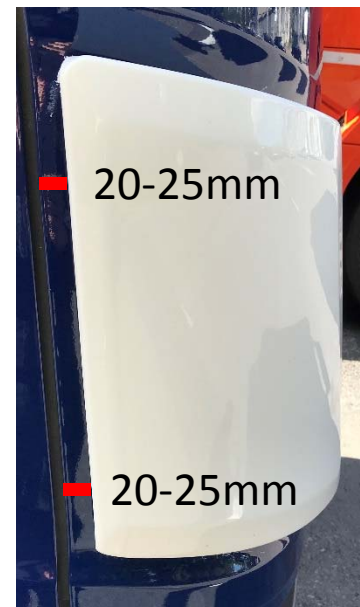

4. Drill the holes first with a smaller drill bit (3-4mm) and then make the holes larger with 6,5mm Drill bit. Clean the holes and place some fixing paint, silicon or sikaflex on the edges of the holes.

5. Mount the dirt deflector on the corners with the M6 screws and washers.

6. Remove the protection foil of the surface.

Read this first if you want to paint the dirt deflector!

The deflector is made from ABS-PMMA plastic, which can be painted with acrylic based paints. For painting ask instructions from your paint supplier for ABS-PMMA material. Remember to remove the protective foil before painting!