

# Fitting Instructions

## Scania Topline Vehicles

Have technical questions or need fitting advice?  
Contact Kuda UK - 01449 744174

### Step 1.




Remove centre locker shelf and bottom rubber mat to create space for microwave.

### Step 2.



Remove N/S Small Locker by removing 4 small screws along front edge. Also remove O/S left hand small storage hole. This just pulls out.

### Step 3.

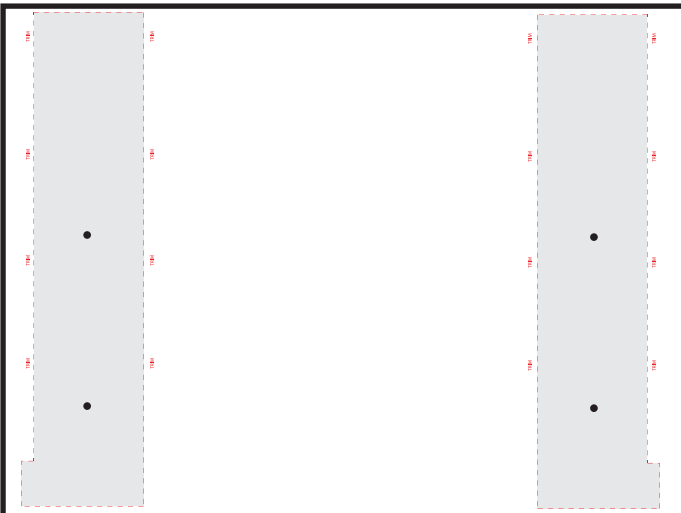


Place supplied drilling jig on locker floor. You will need to trim the jig along the marked cut lines, this will ensure that the marked holes are in the correct location. Drill holes as marked using 6mm drill bit.

### Step 4.



Remove rubber bung and pull through microwave preparation wire (factory fitted).

## Step 5.

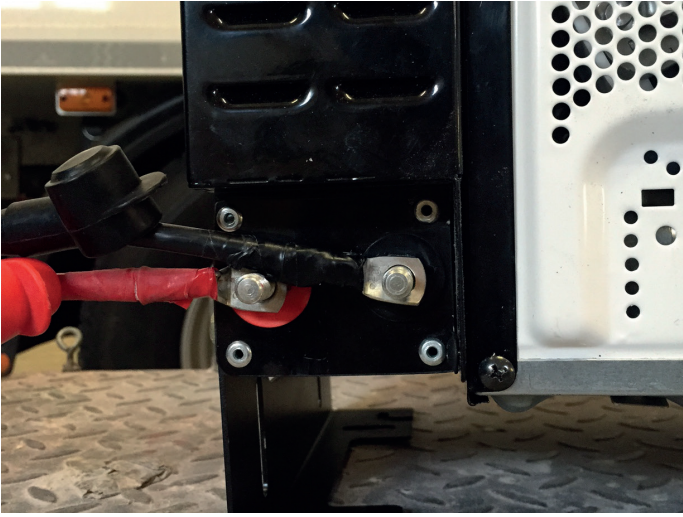

Connect small (Scania GB) supplied loom to the back of the microwave unit.

## Step 6.




Secure legs as shown to either side of the microwave unit. Use supplied short bolts and washers.

## Step 7.



Plug microwave into the locker plug then position microwave in locker with the holes in the bottom of the legs over the ones in the locker floor drilled earlier. Drop through long bolts supplied and fasten with supplied nylocks and washers.

## Step 8. (Optional)

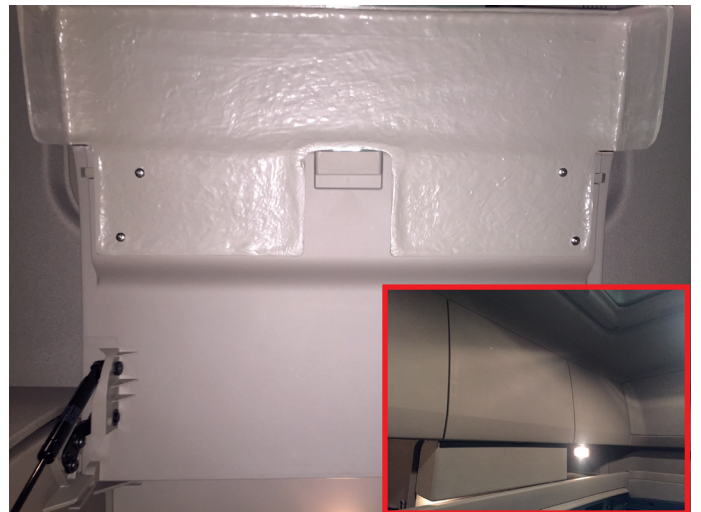

If you have the optional Topline Fascia panel supplied this is secured to the centre locker door using the supplied screws via the pre-drilled holes as shown.