



Fitting Instructions

Scania Highline Vehicles

Have technical questions or need fitting advice?
Contact Kuda UK - 01449 744174

Step 1.




Remove centre locker door and locker floor to expose factory microwave wiring.

Step 2.



Drill removed locker floor using the supplied drilling jig. Attach microwave brackets as shown using supplied nuts and bolts. Drill hole sufficient to pull through factory plug.

Step 3.

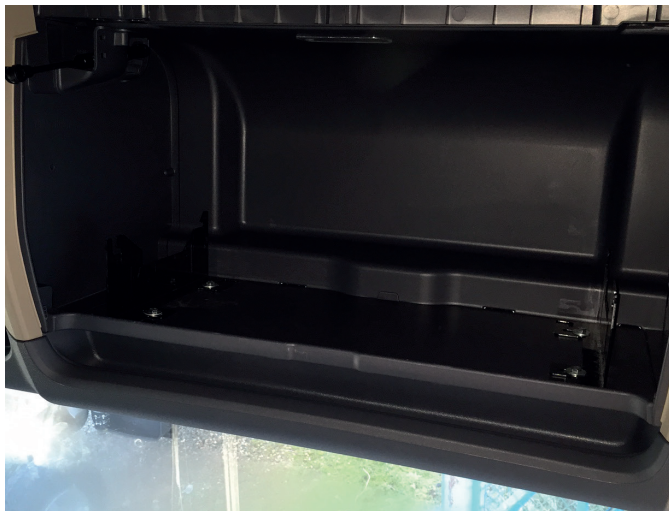

Replace locker floor, pull through factory microwave plug.

Step 4.



Screw in 2 x M6 bolts (one per side) to each of the rear corners of the microwave. Screw to the end of the thread.

Step 5.



Plug in loom then slide microwave along brackets to locate the rear bolts at the rear of the brackets. You should angle the microwave as shown to lift over the front bracket slots.

Step 7.



Pivot the microwave back and align the 2 front bolt holes. Secure with supplied bolts and ensure these are tightened fully.

Step 6.



Replace locker door.

Important - Do not secure the front brackets of the microwave until you have secured the locker door.

Step 8.



Check all fixings are secure to avoid vibrations.