

Fitting Guide

MirrorShield with Pop Rivet Fixing



IMPORTANT

Ensure vehicle is parked with handbrake applied and engine off before fitting this item.

We suggest 2 people to for ease of fitment.

Step 1.

Place the main guard on the back of the mirror housing, hold with one hand.

Step 2.

Offer the front frame up to sandwich in-between the mirror housing and the guard as shown in figure 2.

Step 3.


Insert the supplied pop rivets through the guard and the front frame.

Step 4.

Working from the top in a clockwise direction close up the pop rivets with a rivet gun.

Step 5.

Check all fixings are tight and secure.

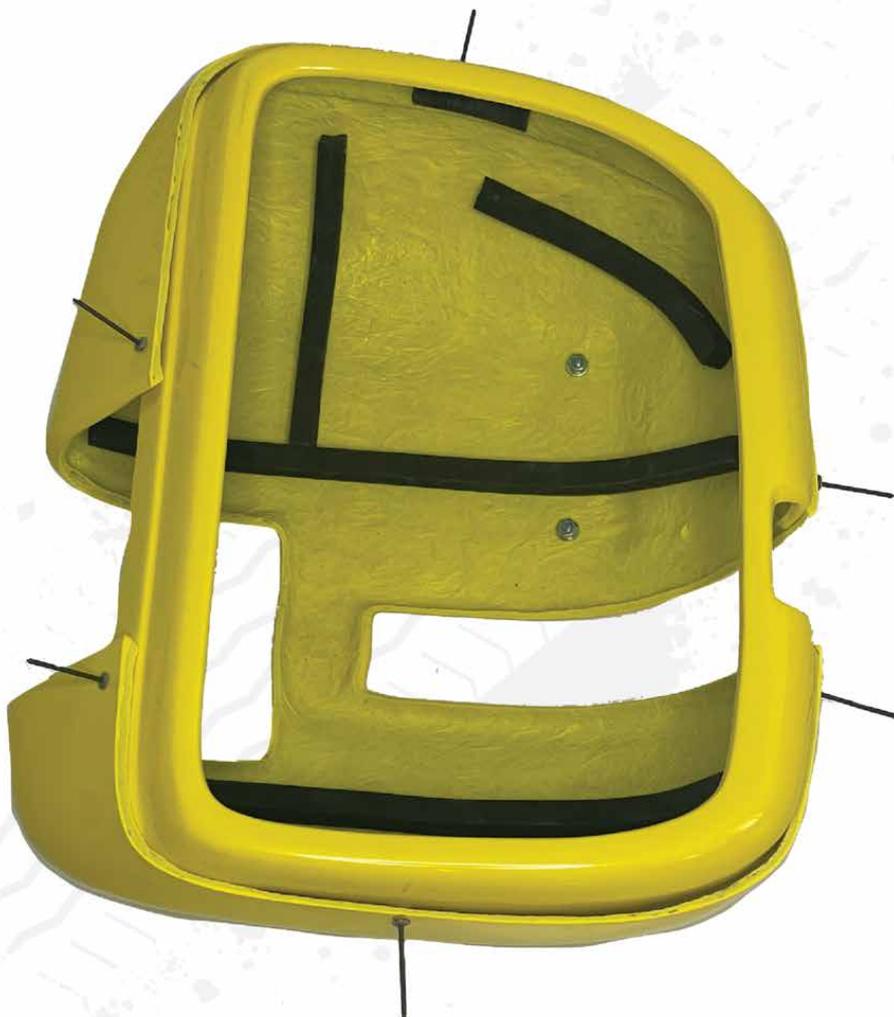

If in doubt please contact our team on
+44 (0) 1449 744174
or email
sales@kudauk.ltd.uk

Fitting Guide

MirrorShield with Bolt Fixing



IMPORTANT

Ensure vehicle is parked with handbrake applied and engine off before fitting this item.



We suggest 2 people to for ease of fitment.

Step 1.

Prepare the mirror for fitment by using the supplied cleaning wipe to ensure the surface is free from and dirt or chemicals. Remove the backing from the double sided foam within the guard. Place the main guard on the back of the mirror housing, hold in place.

Step 2.

Offer the clamps up to the guard and insert the supplied fixings (bolt, washer and nylock), fit hand tight.

Step 3.

Once both clamps are on and the guard is supported. tighten the fixings with a HAND TOOL. Do not use power or air tools as this may damage the guard. Repeat for the otherside and fit nut covers.

If in doubt please contact our team on
+44 (0) 1449 744174
or email sales@kudauk.ltd.uk