


RENAULT T RANGE SIDESKIRT FITTING




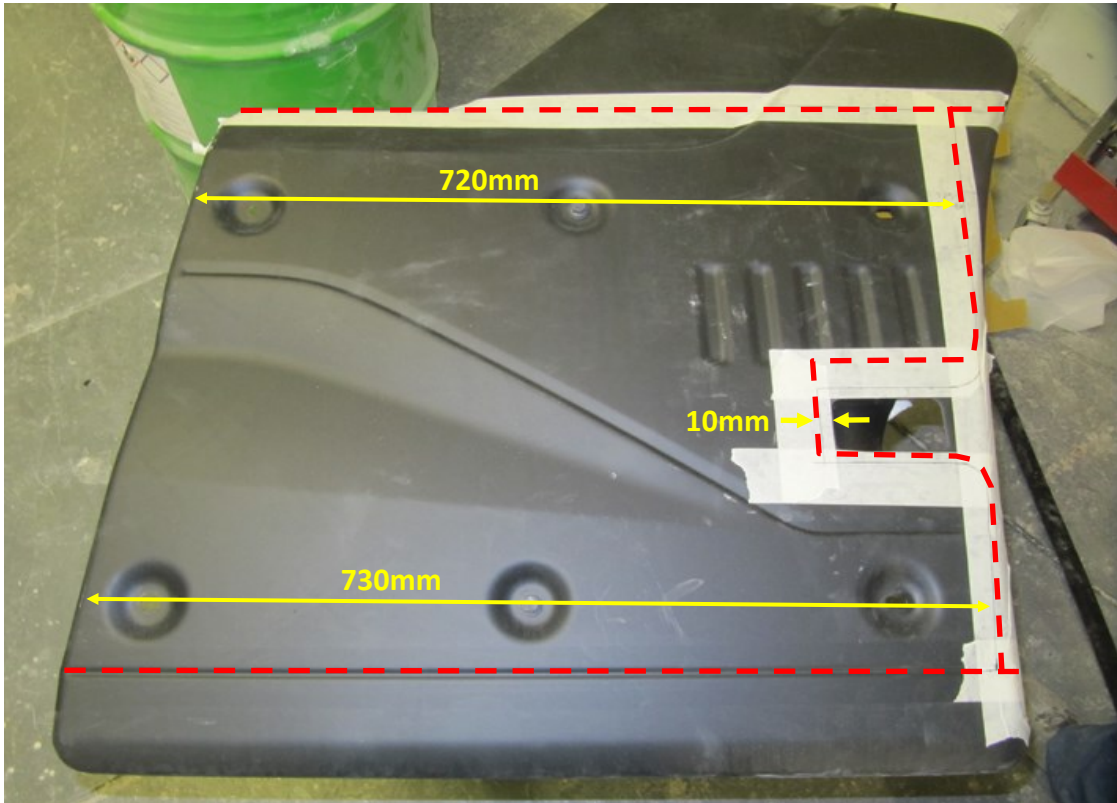

BEFORE & AFTER CUTTING HEATSHIELD



After cutting, de-burr all edges and treat with rust protector.

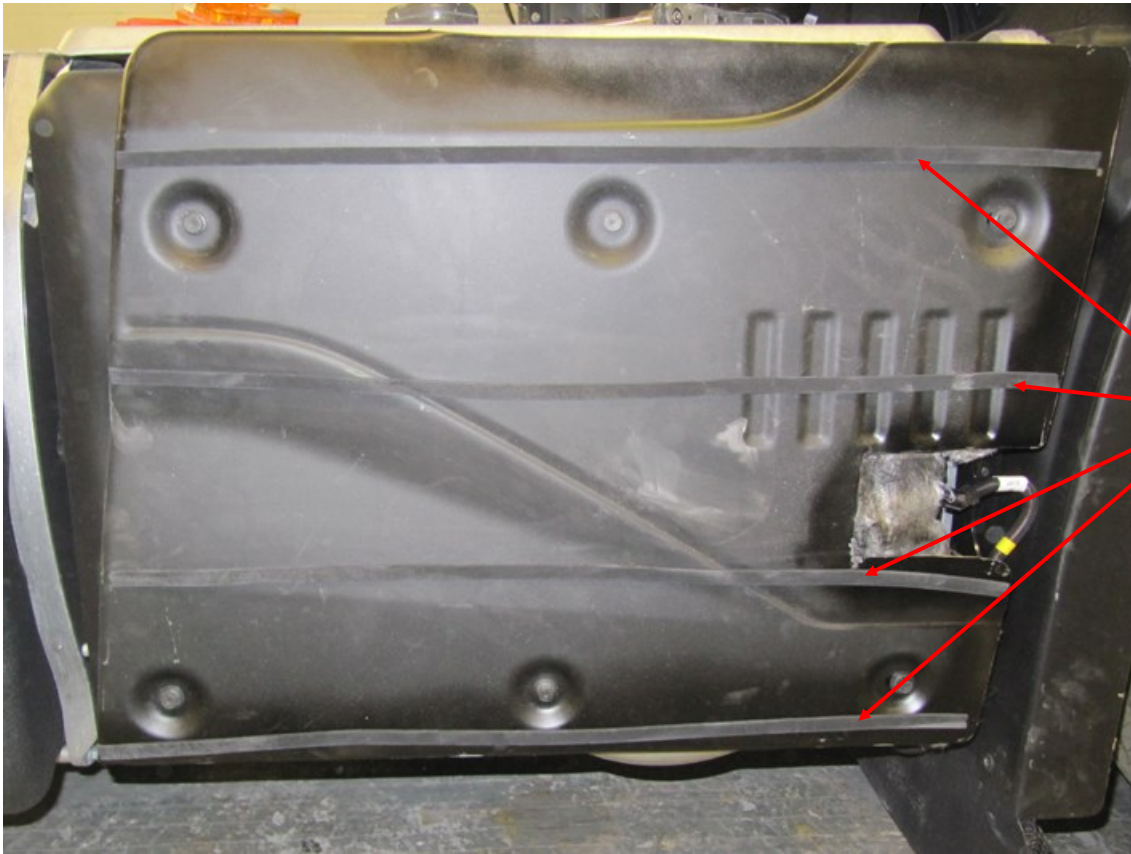

Anti
Vibration
Foam
Tape

After trimming and re-fitting heat shield, apply anti vibration foam tape as seen above.



Bolt both sideskirts through mudwings via pre-drilled holes in sideskirt returns.

Use M8x40mm screws, M8 x 25 washers & M8 nyloc nuts for front fixings.

Use M8x250mm screws, M8 x 25 washers & M8 nyloc nuts for rear fixings.






Fix supplied angle bracket as shown above, replacing existing screw with M8x25 screw and washer supplied in fitting kit.



Fit M6 threaded inserts into original steps as shown.

Place rubber spacer over inserts on top step, as shown above.



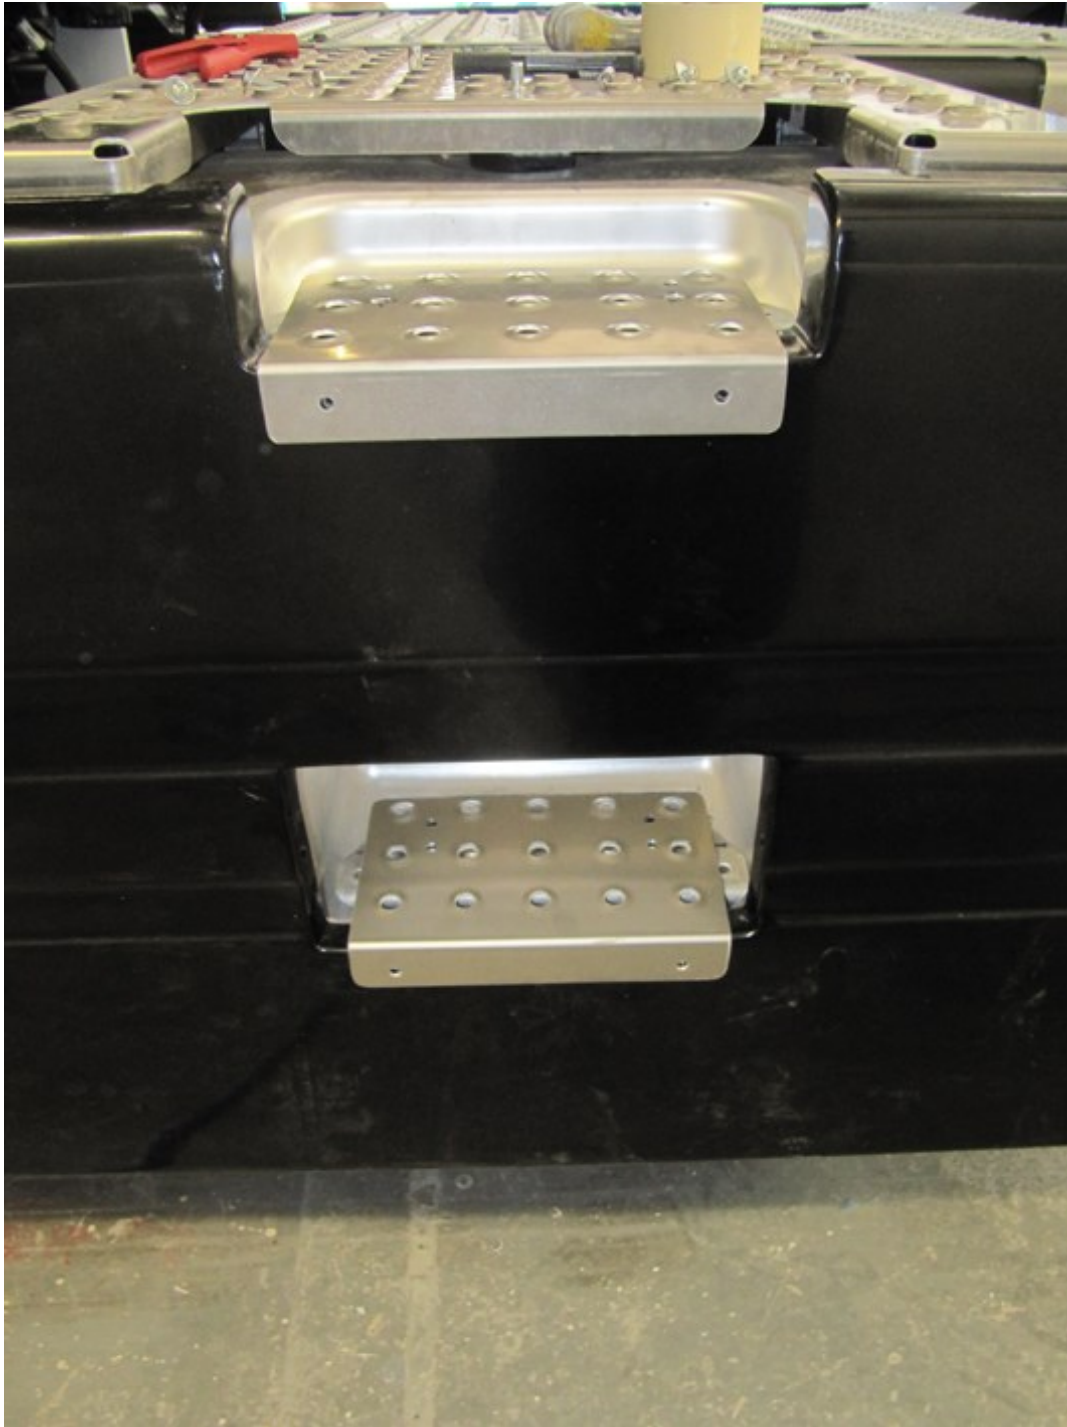

Fit aluminium step provided to sideskirt using, M6x35 button head screw through holes in front of step, securing with washers and nyloc nuts supplied.

Fit aluminium step to original truck step using, M6x20 dome head screw and spring washers supplied, into threaded inserts in truck step.

FITTING KIT

Nearside

2 x M8x40 screws

2 x M8x25 screws

8 x M8x25 washers

4 x M8 nyloc nuts

4 x M6 threaded inserts

2 x square rubber spacers

4 x M6x35 dome head screws

4 x M6x20 dome head screws

4 x M6 nyloc nuts

4 x M6 spring washers

12 x M6x20 washers

Offside

2 x M8x40 screws

3 x M8x25 screws

9 x M8x25 washers

5 x M8 nyloc nuts

4 x 800mm anti vibration foam tape

1 x M8x30 washer