



# iAM Air Management Kit

## Fitting Instructions

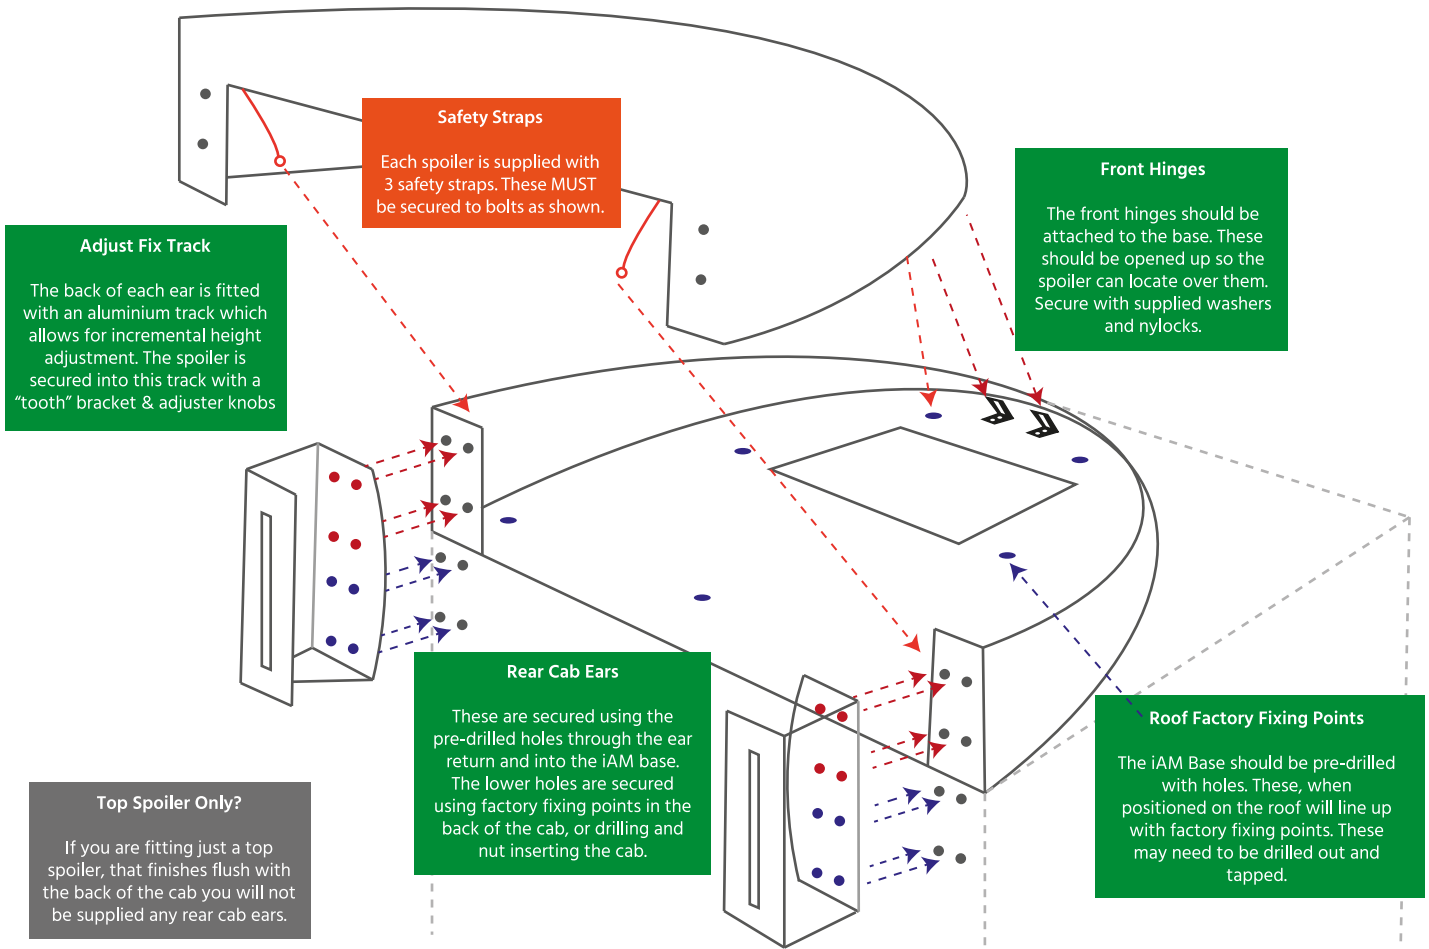

### For Fitting reference. Guidance for Sealer Location

Red Line indicates a 8-10mm wide bead of sealer to be applied in this location.

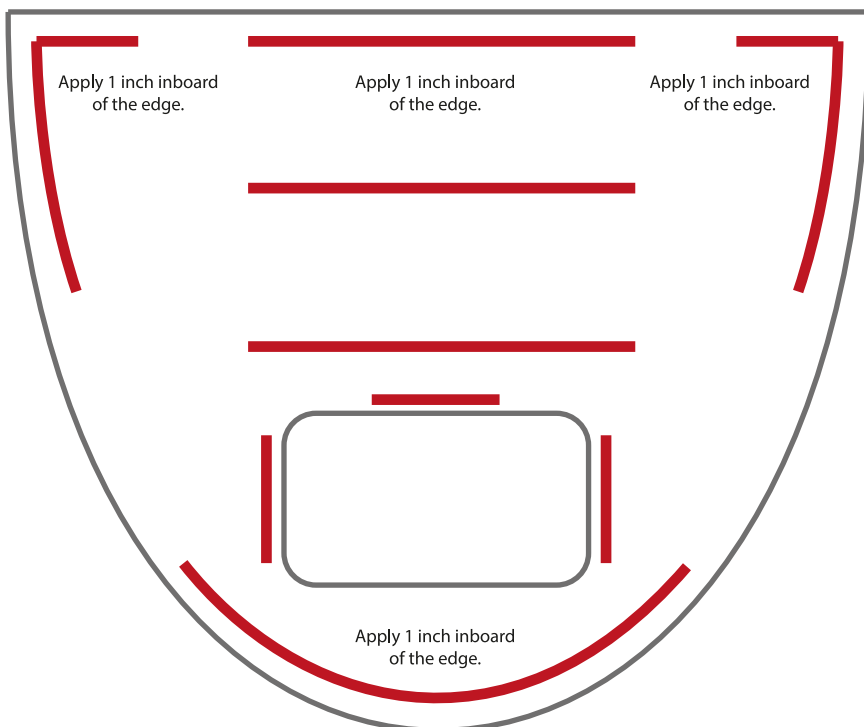

**IMPORTANT**  
Ensure all factory and mechanical roof fixings are also sealed and tight before fitting the roof spoiler.

**IMPORTANT**  
Always double check all fittings are tight and that all sealer has cured before driving the vehicle.

For further information or fitting help, please contact us;  
[www.kudauk.ltd.uk](http://www.kudauk.ltd.uk)  
 01449 744174